


Communication with the sampler - PC and LAN/WEB/GPRS-UMTS -


1. Connection via USB and PC:

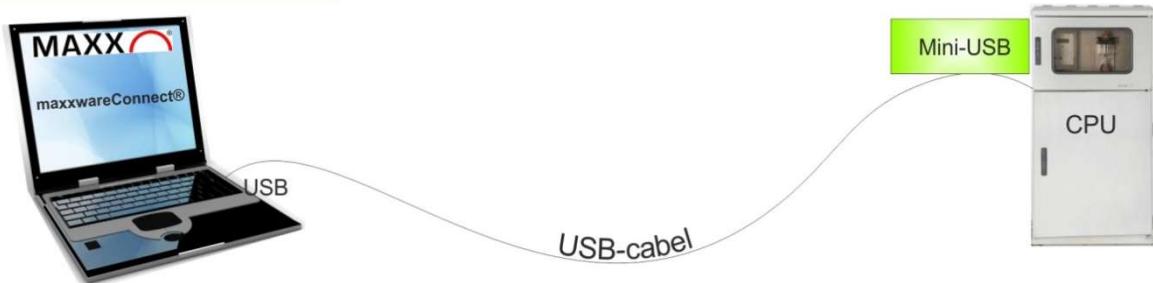

Functionality of maxxwareConnect®:

- maxxwareConnect® **has to be** installed on the PC
- Connection to the sampler via USB/MiniUSB cable
- remote control of the sampler
- visualization of downloaded data
- download and saving of data as PDF, CSV or XLSX Format
- print-out of data directly as PDF Format
- backup of all preprogrammed programs from the sampler
- recovery of saved programs.

2. Connection via LAN Modul RJ45

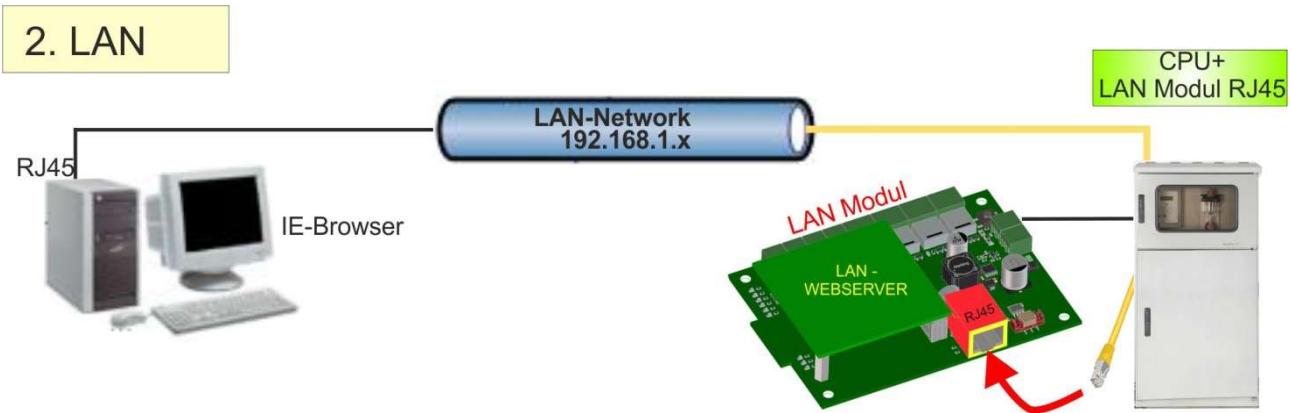


LAN Modul RJ45

- + Data memory for 2 years at 1 min sample interval (ring memory)
- + Linux OS
- + TCP/IP (RJ45)
- + recording of all CPU Data
 - data of sampling cycle
 - bottle report and error log
 - temperature
 - analog inputs
 - etc.
- + visualization via Webinterface
- + Data-export (PDF, CSV, XLSX, ODS, TXT)
 - Download via Web-interface
 - http(s)-Download
 - FTP-push (optional)
- + E-Mail error messaging
- + Full remote control via visualized interface
 - Change programs, start/stop
 - Change all sampler settings
- + More communication options:
 - Modbus/TCP (optional)
 - MQTT (optional)
- + Remote firmware update of the sampler
- + Network parameters of the web server can be set via the web interface or on the sampler

3. Connection via LAN RJ45 Modul +/GPRS-UMTS:

3. GPRS / UMTS / EGDE

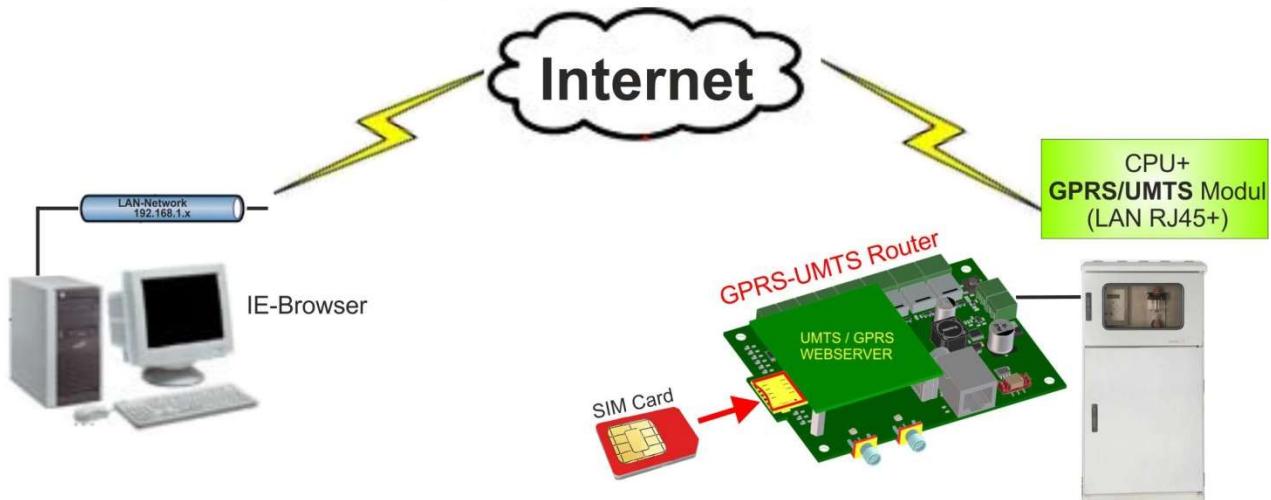


- **REMARK: SIM-Card with data capability is necessary and must be provided by customer!**

LAN Modul RJ45 + GPRS/UMTS Router

- + Data memory for 2 years at 1 min sample interval (ring memory)
 - + Linux OS
 - + TCP/IP (RJ45)
 - + recording of all CPU Data
 - data of sampling cycle
 - bottle report and error log
 - temperature
 - analog inputs
 - etc.
 - + visualization via Webinterface
 - + Data-export (PDF, CSV, XLSX, ODS, TXT)
 - Download via Web-interface
 - http(s)-Download
 - FTP-push (optional)
 - + E-Mail error messaging
 - + Full remote control via visualized interface
 - Change programs, start/stop
 - Change all sampler settings
 - + More communication options:
 - Modbus/TCP (optional)
 - MQTT (optional)
 - + Remote firmware update of the sampler
 - + Network parameters of the web server can be set via the web interface or on the sampler
- Additionally**
- + Integrated cellular GPRS/LTE router (industry standard)
 - + GPRS/LTE
 - + Cellular antenna

4. Connection via WLAN-Router - connected to the LAN Modul RJ45

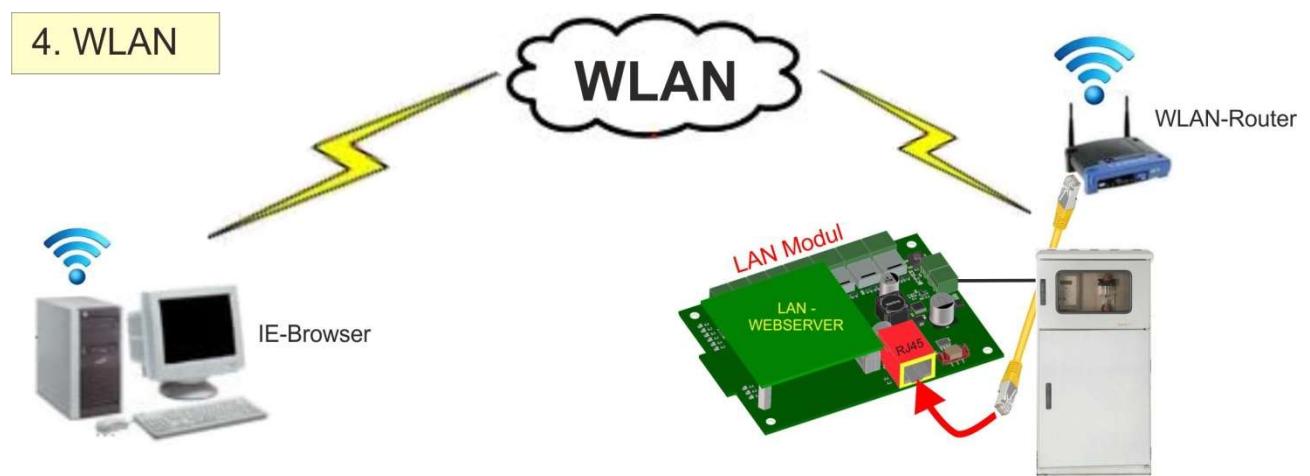

- WLAN Router must be provided by customer!

LAN Modul RJ45 + GPRS/UMTS Router

- + Data memory for 2 years at 1 min sample interval (ring memory)
- + Linux OS
- + TCP/IP (RJ45)
- + recording of all CPU Data
 - data of sampling cycle
 - bottle report and error log
 - temperature
 - analog inputs
 - etc.
- + visualization via Webinterface
- + Data-export (PDF, CSV, XLSX, ODS, TXT)
 - Download via Web-interface
 - http(s)-Download
 - FTP-push (optional)
- + E-Mail error messaging
- + Full remote control via visualized interface
 - Change programs, start/stop
 - Change all sampler settings
- + More communication options:
 - Modbus/TCP (optional)
 - MQTT (optional)
- + Remote firmware update of the sampler
- + Network parameters of the web server can be set via the web interface or on the sampler