

Portable Samplers



P6 L

Model P6 Vacuum Dosingsystem

Technical data at a glance

Housing:	Made of ABS and PP Doublewalled, insulated base
Control:	Microprocessor control, foil keypad, back lit display Option: with PC software or LAN/GPRS/WEB communication (2 year ring memory FIFO at 1 min interval)
Programming:	12 freely programmable user programs, user-friendly software
Interface:	MiniUSB, optional: Ethernet RJ45, SDI-12
Signal inputs:	2 x analog: 0/4–20 mA, working resistance 500 Ohm 8 x digital (Flow, Event, 1 x free programmable) Impulse length 50 ms
Signal outputs:	8 x digital, one of them as collective malfunction message
Dosing system:	Vacuum: Plastic 15-320 ml, optional glass 15-290 ml
Suction height:	6,5 m (at 1000 hPa), higher possible on request
Sampling modes:	Time (CT, CV), Flow (VT, CV) or (CT, VV) (Flow modes are controlled by an external flowmeter signal) Event and manual sampling
Bottle variants:	P6 L PE: 24 x 1 l/1 x 10 l/4 x 4 l/8 x 2 l Glass: 24 x 350 ml/12 x 1 l/8 x 2 l P6 Mini Maxx: PE: 1 x 10 l; glass: 1 x 5 l
Overall dimensions:	P6 L: 500 x 805 mm (diam. x h) P6 Mini Maxx: 400 x 605 mm (diam. x h)
Weight:	P6 L approx. 9 kg (without battery) P6 MINI MAXX approx. 9 kg (without battery)
Power supply:	12 V/9 Ah battery with charger 2A IP65 or power supply 7A IP65
Ambient temperature:	0° to +50° C
Sample temperature:	0° to +40° C
Standards:	CE, sampling according to ISO 5667-10, EN 16479



P6 MINI MAXX



P6 L

Unique combination of design
and technology

Your advantages:

- > Direct connection via USB of an external multi-parameter portable meter pH/Cond/Temp [Option]
- > Highly accurate sample volume
- > Clear operating structure and simple programming
- > LAN/GPRS/Web communication [Option]
- > Easy cleaning
- > Modern and ergonomic design
- > Long battery run-time thanks to »sleep mode«
- > 2nd dosing tube for changing the sample volume
- > Pumping speed > 0,5 ms at suction height up to 5 m (at 1000 hPa)



P6 L MAXX with suspension harness (optional)



P6 L with 24 x 1 L bottle variant



Model P6 Peristaltic Pump

Technical data at a glance

Housing:	Made of ABS and PP Doublewalled, insulated lower part
Control:	Microprocessor control, foil keypad, back lit display Option: with PC software or LAN/GPRS/WEB communication (2 year ring memory FIFO at 1 min interval)
Programming:	12 freely programmable programs, user-friendly software
Interface:	MiniUSB, optional: Ethernet RJ45, SDI-12
Signal inputs:	2 x analog: 0/4–20 mA , working resistance 500 Ohm 8 x digital (Flow, Event, 1 x free programmable) Impulse length 50 ms
Signal outputs:	8 x digital, one of them as collective malfunction message
Dosing system:	Peristaltic pump 10–10.000 ml
Suction height:	max. 8,5 m (at 1000 hPa)
Sampling modes:	Time (CT, CV), Flow (VT, CV) or (CT, VV), variable flow (Flow modes are controlled by an external flowmeter signal) Event and manual sampling
Bottle variants:	P6 L PE: 24 x 1 l/1 x 10 l/4 x 4 l/8 x 2 l Glass: 24 x 350 ml/12 x 950 ml/8 x 2 l P6 Mini Maxx: PE: 1 x 10 l; glass: 1 x 5 l
Overall dimensions:	P6 L: 500 x 805 mm (diam. x h) P6 Mini Maxx: 400 x 605 mm (diam. x h)
Weight:	P6 L approx. 9 kg (without battery) P6 MINI MAXX approx. 9 kg (without battery)
Power supply:	12 V/9 Ah battery with charger 2A IP65 or power supply 7A IP65
Ambient temperature:	0° to +50° C
Sample temperature:	0° to +40° C
Standards:	CE, sampling according to ISO 5667-10, EN 16479



P6 MINI MAXX



P6 L

Unique combination of design and technology

Your advantages:

- > Intelligent sensor replacement function »MAXX mode«
- > Direct connection via USB of an external multi-parameter portable meter pH/Cond/Temp (Option)
- > Innovative measuring device for volume determination
- > Minimal effort für calibration
- > Highly accurate sample volume
- > Clear operating structure and simple programming
- > LAN/GPRS/Web communication (Option)
- > Easy cleaning
- > Modern and ergonomic design
- > Long battery run-time thanks to »sleep mode«
- > Integrated pump replacement tube
- > Pumping speed > 0,5 ms at suction height up to 5 m (at 1000 hPa)



P6 MINI MAXX with composite container



P6 MINI MAXX with suspension harness



Model TP5 C with active cooling

Technical data at a glance



Housing:	PE/PC (GF10) Doublewalled, insulated lower part
Thermostatic control:	compressor cooling (12 V/115 V/230 V)
Control:	Microprocessor control, foil keypad, back lit display Option: with PC software or LAN/GPRS/Web communication (2 year ring memory FIFO at 1 min interval)
Programming:	12 freely programmable programs, user-friendly software
Interface:	MiniUSB, optional: Ethernet RJ45, SDI-12
Signal inputs:	2 x analogue: 0/4–20 mA, working resistance 500 Ohm 8 x digital (Flow, Event, 1 x free programmable) Impulse length 50 ms
Signal outputs:	8 digital outputs, 1x of them as collective malfunction message
Sampling method:	Vacuum 20–350 ml
Suction height:	6,5 m (at 1000 hPa)
Pumping speed:	> 0,5 ms at suction height up to 5 m (at 1000 hPa)
Suction hose:	PVC, L = 5 m, ID = 10 mm (max. hose length 20 m)
Sampling modes:	Time, flow, event-related and manual sample Option: variable flow-proportional sampling
Bottle variants:	24 x 1 l PE (standard version), 24 x 1 l glass, 1 x 10 l; 1 x 25 l, 2 x 13 l; 4 x 5 l; 16 x 1 l PE incl. freezer packs,
Overall dimensions:	1.028 x 550 x 468 mm [h x w x d]/Insulating box active
Weight:	approx. 40 kg; Isobox with active cooling (24 x 1 l)
Power supply:	Sampler 12 V/10 Ah battery/Charger 2A IP65 or power supply 7A IP65 Active box 230/115 V–50/60 Hz 12 V battery
Ambient temperature:	0° to +45° C
Sample temperature:	0° to +40° C
Standards:	CE, sampling according to ISO 5667-10, EN 16479



T5 C – Compact device with integrated distributor insulating box with active cooling

Your advantages:

- > Direct connection via USB of an external multi-parameter portable meter pH/Cond/Temp (Option)
- > with vacuum system
- > Highly accurate sample volume
- > Transport trolley (Option)
- > Clear operating structure and simple programming
- > LAN/GPRS/Web communication (Option)
- > Easy cleaning
- > Modern and ergonomic design
- > Long battery run-time thanks to »sleep mode«
- > 2nd dosing tube for changing the sample volume
- > Active cooling system with compressor 12/115/230 V



Active cooling 12/115/230 V
variant 24 x 1 l



Charger 2A IP65 or power
supply 7A IP65




Model TP5 C with passive cooling



Technical data at a glance

Housing:	PE/PC (GF10) Doublewalled, insulated lower part
Thermostatic control:	compressor cooling (12 V/115 V/230 V)
Control:	Microprocessor control, foil keypad, back lit display Option: with PC software or LAN/GPRS/WEB communication (2 year ring memory FIFO at 1 min interval)
Programming:	12 freely programmable programs, user-friendly software
Interface:	MiniUSB, optional: Ethernet RJ45, SDI-12
Signal inputs:	2 x analog: 0/4–20 mA, working resistance 500 Ohm 8 x digital (Flow, Event, 1 x free programmable) Impulse length 50 ms
Signal outputs:	8 digital outputs, 1x of them as collective malfunction message
Sampling method:	Vacuum: Plastic 15-320 ml, optional glass 15-290 ml
Suction height:	6,5 m (at 1000 hPa)
Pumping speed:	> 0,5 ms at suction height up to 5 m (at 1000 hPa);
Suction hose:	PVC, L = 5 m, ID = 10 mm (max. hose length 20 m)
Sampling modes:	Time, flow, event-related and manual sample,
Bottle variants:	24 x 1 l PE (standard version), 24 x 1 l glass, 1 x 10 l; 1 x 25 l, 2 x 13 l; 4 x 5 l; 16 x 1 l PE incl. freezer packs
Overall dimensions:	787 x 510 x 468 mm (h x w x d)/Insulating box passive
Weight:	approx. 25 kg: Isobox with passive cooling (24 x 1 l)
Power supply:	sampler 12 V/10 Ah battery/Charger 2A IP65 or power supply 7A IP 65
Ambient temperature:	0° to +50° C
Sample temperature:	0° to +40° C
Standards:	CE, sampling according to ISO 5667-10, EN 16479

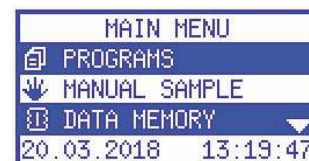

T5 C – Compact device with integrated distributor insulating box with passive cooling

Your advantages:

- > Direct connection via USB of an external multi-parameter portable meter pH/Cond/Temp (Option)
- > With vacuum system
- > Highly accurate sample volume
- > Transport trolley (Option)
- > Clear operating structure and simple programming
- > LAN/GPRS/Web communication (Option)
- > Easy cleaning
- > Modern and ergonomic design
- > Long battery run-time thanks to »sleep mode«
- > 2nd dosing tube for changing the sample volume
- > Sample cooling with ice packs/dry ice



Suspension bar for use in sewers
with suspension harness



Dosing system Vakuum



Model TP5 P



Technical data at a glance

Housing:	PS/PC (GF10)/PE Doublewalled, insulated lower part
Thermostatic control:	compressor cooling (12 V/115 V/230 V)
Control:	Microprocessor control, foil keypad, back lit display Option: with PC software or LAN/GPRS/WEB communication (2 year ring memory FIFO at 1 min interval)
Programming:	12 freely programmable programs, user-friendly software
Interface:	MiniUSB, optional: Ethernet RJ45, SDI-12
Signal inputs:	2 x analogue: 0/4–20 mA, working resistance 500 Ohm 8 x digital (Flow, Event, 1 x free programmable) Impulse length 50 ms
Signal outputs:	8 digital outputs, 1x of them as collective malfunction message
Sampling method:	Vacuun: Plastic 15-320 ml, optional glass 15-290 ml
Suction height:	6,5 m (at 1000 hPa), higher possible on request
Pumping speed:	> 0,5 ms at suction height up to 5 m (at 1000 hPa)
Suction hose:	PVC, L = 5 m, ID = 10 mm (max. hose length 20 m)
Sampling modes:	Time, Flow, Event-related and manual sample
Bottle variants:	1 x 10 l; 1 x 25 l,
Overall dimensions:	Device 442 x 452 x 222 mm (HxWxD) Isobox passive: 534 x 510 x 430 mm (HxWxD) Isobox active: 775 x 550 x 468 mm (HxWxD)
Weight:	Isobox passive approx. 11 kg, isobox active approx. 25 kg
Power supply:	sampler 12 V/10 Ah battery/Charger 2A IP65 or power supply 7A IP65 Active cooling 230/115 V, 50/60 Hz/12 V Accu
Ambient temperature:	0° to +50° C
Sample temperature:	0° to +40° C
Standards:	CE, sampling according to ISO 5667-10, EN 16479



Compact device which can be combined with any composite container or an insulating box with active or passive cooling

Your advantages:

- > Direct connection via USB of an external multi-parameter portable meter pH/Cond/Temp (Option)
- > Highly accurate sample volume
- > Transport trolley (Option)
- > Clear operating structure and simple programming
- > LAN/GPRS/WEB communication (Option)
- > Easy cleaning
- > Modern and ergonomic design
- > Long battery run-time thanks to »sleep mode«
- > Sample cooling with ice packs/dry ice



TP 5 P with strap on active insulating box




Dosing unit with bayonet fixing



Model TP5 W

Wall-mounted device

Technical data at a glance

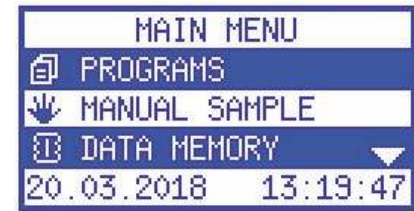

Housing:	PS/PC (GF10)
Thermostatic control:	no; option: refrigerator
Control:	Microprocessor control, foil keypad, back lit display Option: with PC software or LAN/GPRS/WeEB communication (2 year ring memory FIFO at 1 min interval)
Programming:	12 freely programmable programs, user-friendly software
Interface:	MiniUSB, optional: Ethernet RJ45, SDI-12
Signal inputs:	2 x analogue: 0/4–20 mA, working resistance 500 Ohm 8 x digital (flow, event, 1 inputs can be programmed freely) Impulse length 50 ms
Signal outputs:	8 digital outputs, 1x of them as collective malfunction message
Sampling method:	Vacuum: Plastic 15-320 ml, optional glass 15-290 ml
Suction height:	6,5 m (at 1000 hPa), higher possible on request
Pumping speed:	> 0,5 ms at suction height up to 5 m (at 1000 hPa);
Suction hose:	PVC, L = 5 m, ID = 10 mm (max. hose length 20 m)
Sampling modes:	Time, Flow, Event-related and manual sample,
Bottle variants:	composite container (Option)
Overall dimensions:	362 x 442 x 222 mm (hwxwd)
Weight:	approx. 10 kg
Power supply:	230 V/ 115 V/AC
Ambient temperature:	0° to +50° C
Sample temperature:	0° to +40° C
Standards:	CE, sampling according to ISO 5667-10, EN 16479

Wall-mounted device which can be combined with any composite container or refrigerator

Your advantages:

- > New, direct connection via USB of an external multi-parameter portable meter pH/Cond/Temp (Option)
- > Flexible application and combination possibilities
- > Highly accurate sample volume
- > Clear operating structure and simple programming
- > LAN/GPRS/WEB communication (Option)
- > Easy cleaning
- > Modern and ergonomic design



TP5 W in combination with optional fridge 1 x 25 L




Non-contact, capacitive filling level-sensor (Option)



An excerpt from our big
range of accessories



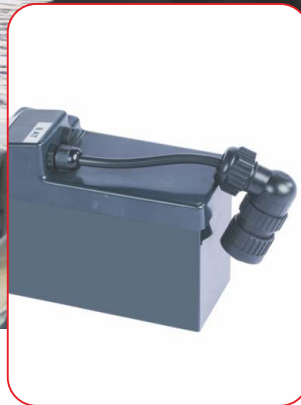



MAXX[®]

Mess- und Probenahmetechnik GmbH

MAXX GmbH
Hechinger Straße 41
72414 Rangendingen

Phone +49 (0)7471 98481 0
Fax +49 (0)7471 9848144

www.maxx-gmbh.com
info@maxx-gmbh.com



Any questions?



Please contact us:
info@maxx-gmbh.com

Technical subject to changes.